


1266 Erie Street, Stratford, ON N4Z 0A1 Tel. 519.271.6590 Fax. 519.271.0264 Toll Free 1.877.265.6590 info@edsconcrete.com edsconcrete.com

WINDOW WELL SHEET

Lifting Points

- When lifting the window well ensure the following:
 - o lifting loops are fulling threaded into the inserts
 - lifting straps or chains must be on a 60 degree angle, minimum

LIFTING POINTS

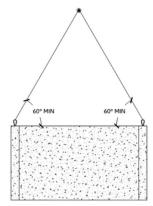

Anchoring

- it is recommended that the foundation wrap be removed from behind the window well and the anchor brackets in order to achieve a proper connection to the foundation wall. Re-seal after installation
- DO NOT over-tighten expansion anchors over tightening WILL cause the window well to crack.